



Masters of the Outback!



Fitting Instructions


DAF XG660



Masters of the Outback!



Remove the front cover from the vehicle by pressing down on the toggle, as shown below.

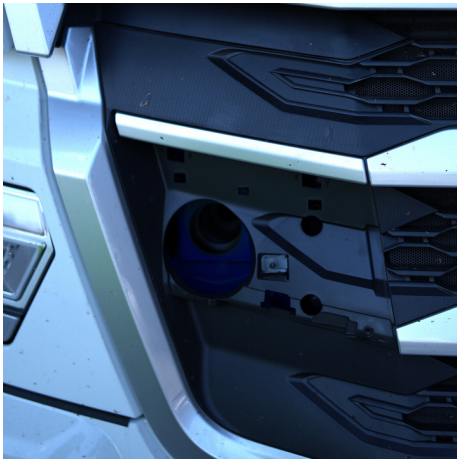

Remove the plug from the mandrel cover.



Attach the first half of the mandrel, on both the left and right side.




Attach the support bracket, using the second set of bolts. Repeat this for both sides.





Attach the FUPS bar to the support bracket using the two supplied bolts, and attach the second part of the mandrel. Repeat this process on both sides of the vehicle.

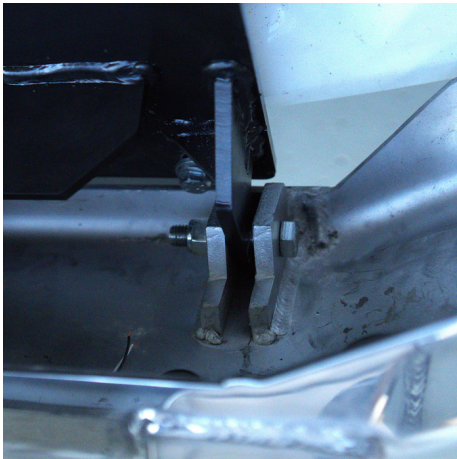

Carefully lift the bullbar into position and secure it to the FUPS bar using the hinge bolts.



Attach the eye bolts to the bullbar and tighten securely using a spanner.



Congratulations! You have now fitted an AJs Bullbar to your truck.